

Register the wireless microphone unit (continued)

After registration, plug the telephone line cord back into the wall jack.

note

- If registration has failed, the base unit will display **Registration failed. Try again** and returns to idle. You hear an error tone. Remove the microphone units from the charging cradles and place them back in. Repeat steps 1 to 3 to try the entire registration process again.
- If the screen does not display **Registration done** after step 3, repeat steps 1 to 3 to try the entire registration process again.
- All wireless microphone units should always be kept on the charging cradles during deregistration and registration. Any wireless microphone unit which is registered before but not put into the charging cradle will be deregistered after the above operations.
- Status indicators on the wireless microphone units flash red and green alternately during registration.
- To cancel registration, press **CANCEL CLEAR**. The base unit displays **Registration cancelled**. If registration is cancelled, some of the wireless microphone units may be deregistered. To register them back to the base unit, repeat steps 1 to 3 to try the entire registration process again.

vtech[®]

ErisStation[™]

Wireless Conference Phone

Instruction sheet
businessphones.vtech.com



Model: VCS704-WM



Specifications are subject to change without notice.
© 2014 VTECH TELECOMMUNICATIONS LTD.
All rights reserved. 02/14. Version 1


Congratulations

on purchasing your new VTech product.

For support, shopping, and everything new at VTech, visit our website at <http://businessphones.vtech.com>, or call (US) 1-800-595-9511, (Canada) 1-800-267-7377.

Charge the wireless microphone unit

1. The battery is pre-installed in your wireless microphone unit. Pull the battery tap off from the battery door before charging.
2. Place the wireless microphone unit into the charging cradles at the conference phone main base until they are flush.

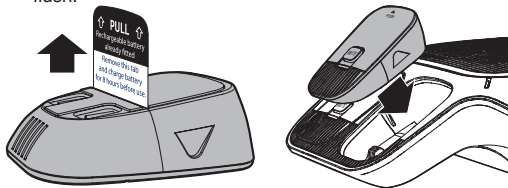

note

- Charge the battery for 8 hours before use.
- If the wireless microphone unit becomes warm when the battery is charging, it is normal.
- Risk of explosion! Keep the battery away from heat, sunshine or fire. Never discard battery in fire.
- Use only the supplied battery.



TIP: If you need to replace the battery, refer to the detail instructions in **VCS704** user's manual.

Register the wireless microphone unit

You should register your new wireless microphone unit to the base unit following the instructions below.

To register the wireless microphone unit

As part of this process, all existing, broken, or lost wireless microphone units will be deregistered first. Then, the base unit will re-register the four wireless microphone units that are placed into the charging cradles.

Before registration, unplug the telephone line cord from the wall jack to make sure there are no incoming calls during registration.

1. Gather the new wireless microphone unit together with the other three wireless microphone units that are to be registered, and then place them into the charging cradles.
2. Enter TONE **X331734#** on the base unit when it is not in use, and then press **MENU SELECT**. The screen displays **Please place all wireless mics on cradle, then press 'SELECT'**.
3. Make sure all the four wireless microphone units are on the charging cradles, and then press **MENU SELECT**. The wireless microphone units enter the deregistration mode, and the screen displays **Processing...**

When deregistration is complete, registration starts. The screen displays **Registering... 1 2 3 4**. The number **X** blinks while registering the X-th wireless microphone unit. You hear a confirmation tone when each wireless microphone unit is registered. When all the four wireless microphone unit are registered, the base unit displays **Registration done**.