

Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.



IS6200

DECT 6.0 accessory cordless headset



vtech®

User's manual

Congratulations

on purchasing your new VTech product. Before using this product, please read **important safety instructions**.

This abridged user's manual provides you with basic installation and use instructions. A limited set of features are described in abbreviated form.


Please refer to the online User's manual for a full set of installation and operation instructions at www.vtechphones.com.




Telephones identified with this logo have reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the Telecommunications Industry Association. Used under license.

What's in the box

Your product package contains the following items. Save your sales receipt and original packaging in the event warranty service is necessary.

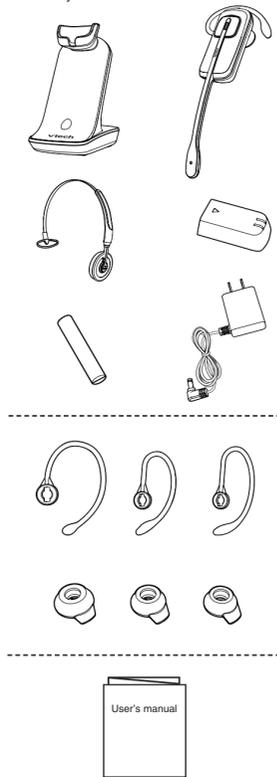


Headset overview

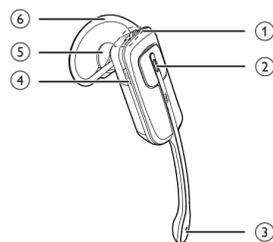

- 1 – **VOL+**
 - Increase the headset volume.
- VOL-**
 - Decrease the headset volume.
- Flash**
 - While on a call, **press and hold** to answer an incoming call when you receive a call waiting alert.
- 2 – **ON/OFF light**
 - On when the headset is charging.
- ON/OFF key**
 - Press to answer or end a call.
- 3 – **Microphone**
- 4 – **MUTE**
 - Press to activate the voice-controlled application on your connected cell phone when idle.
 - Mute the microphone during a call.
 - When there is an incoming call, press to silence the ringer in the earpiece temporarily.
- 5 – **Earpiece**
- 6 – **Earhook**

Charger overview

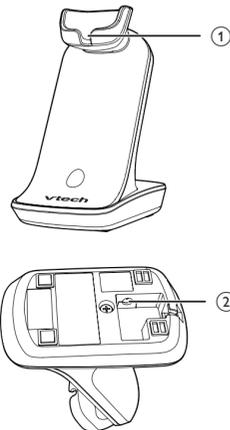

- 1 – **Magnetic charging mount**
 - Place the headset for charging.
- 2 – **Power jack**

Lights and alert tones overview

Light status

Red	<ul style="list-style-type: none">• On when the headset battery is charging.• Flashes every 10 seconds when the headset battery is low and needs charging.
Blue	<ul style="list-style-type: none">• Flashes twice every three seconds when the headset is in use.• Flashes every four seconds when there is an incoming call.• Flashes every 10 seconds when the headset is out of the headset charger and has enough charge.
Red and blue	<ul style="list-style-type: none">• Flashes slowly when the headset is not registered.• Flashes quickly when the headset is registering to a telephone base.
Off	<ul style="list-style-type: none">• No battery is installed, or the headset has run out of battery.• The headset is powered off.

Alert tones


One short beep every 30 seconds	<ul style="list-style-type: none">• The microphone is muted.
Two low beeps	<ul style="list-style-type: none">• Call waiting alert tone.
Three rising beeps	<ul style="list-style-type: none">• A conference call has started.

Connect

NOTES

- Use only the adapters provided.
- Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.

Connect the charger

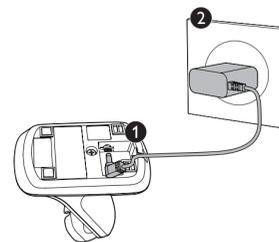


Install the battery

Install the battery as shown below.

NOTES

- Use only supplied battery.
- If the headset will not be used for a long time, remove the battery to prevent possible leakage.

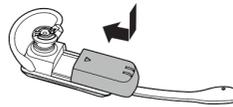


Charge the battery

Place the headset in the charger to charge. The LED light turns on.

NOTES

- For best performance, keep the headset in the telephone base or charger when not in use.
- The battery is fully charged after 3 hours of continuous charging.
- When fully charged, the battery provides approximately 4 hours of talk time or 48 hours of standby time.

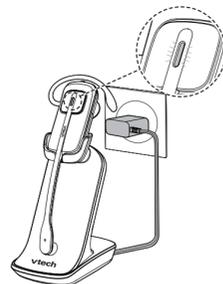

Before use

Add and register a headset

Before use, each newly purchased headset (IS6200) must be registered to a VTech DS, IS, LS, or SN series home cordless phone, a VTech ErisBusinessSystem™ or CM series business phone, an AT&T CL, CRL, CLP, or TL series home cordless phone, or an AT&T Synapse®, Syn248® or SynJ® business phone. Visit www.vtechphones.com for a list of compatible telephones.

The telephone base recognizes and counts a headset the same as a handset. You can place the headset charger anywhere you have an available power outlet.

Refer to your telephone user's manual for a maximum number of headsets that you can register to the telephone base. If you already have the maximum number of handsets/headsets registered, you need to follow the deregistration information in your telephone user's manual before adding a new headset.

Before registering:

Place the non-registered headset in the headset charger and allow it to charge for at least 15 minutes before registration. Remove the headset from the headset charger. The LED light on the headset flashes slowly and alternately in red and blue.

To register a headset to a telephone base:

NOTES

- You cannot register a headset if any other system handset or headset is in use. You can only register one headset to the telephone base at a time.
- The headset must be deregistered before registering it to another telephone system.
- If the registration fails, you hear "Not registered" when you press ON/OFF key on the headset. The ON/OFF light on the headset flashes slowly and alternately in red and blue. To reset the headset, remove it from the headset charger and then place it back into its charger. Try the registration process again.

ErisBusinessSystem™ is a trademark of VTech Communications, Inc. Synapse®, Syn248® and SynJ® are trademarks of Advanced American Telephones.

For VTech models:

1. **Press and hold** **↻**/FIND HANDSET on the telephone base for about four seconds until the red **IN USE** light turns on. Then, release the button.
2. Immediately place the headset in the headset charger. It takes about 60 seconds to complete the registration process. The red **IN USE** light on the telephone base turns off. The **ON/OFF** light on the headset turns red when it is registered and charged.
3. Lift the headset, then press **ON/OFF** key on the headset. If you hear a dial tone, the registration was successful.

For VTech ErisBusinessSystem™:

1. Press **MENU** on the console or deskset.
2. Press **▲** or **▼** to scroll to **Registration**, and press **SELECT** or **▶**/SKIP.
3. Press **▲** or **▼** to scroll to select **DECT Headset**, and then press **SELECT** or **▶**/SKIP. The console or deskset screen displays **Registering DECT Headset... (Put DECT Headset in charger)**.
4. Place the headset in the charger. The registration takes up to 60 seconds to complete. When the registration is complete, the console or deskset screen displays **DECT Headset registered**.
5. Lift the headset, then press **ON/OFF** key on the headset. If you hear a dial tone, the registration was successful.

For VTech CM series business phone system:

1. Press **MENU** on the console.
2. Scroll to **Registration**, then press **SELECT**.
3. Press **SELECT** again to select **Register Ext**.
4. Place the headset in the charger. It may take up to 60 seconds to complete the registration. The console shows **HDST/SPK X registered**. (X represents the extension number 9 to 1) and beeps when the registration is successful.
5. The console shows **Link HDST/SPK X to extension?**. If you want to link the headset with an extension, scroll to **Yes**. Otherwise, choose **No** and then skip to Step 7. Press **SELECT** to confirm.
6. Scroll to select a desired extension to be linked with the headset or speakerphone. Press **SELECT** to confirm.
7. Lift the headset, then press **ON/OFF** key on the headset. If you hear a dial tone, the registration was successful. If you linked the headset with an extension, the extension screen displays the extension number along with the line number it is using.

For AT&T models with **↻**/HANDSET LOCATOR button on the telephone base:

1. **Press and hold** the **↻**/HANDSET LOCATOR button on the telephone base for about four seconds until the **IN USE** light turns on, or the base displays **Registering... Please wait**. Then, release the button.
2. Immediately place the headset in the headset charger. The **ON/OFF** light on the headset flashes quickly and alternately in red and blue to indicate the registration is in progress. This may take up to five minutes to complete. The **ON/OFF** light on the headset turns red when it is registered and charged. You hear a confirmation tone.
3. Lift the headset, then press **ON/OFF** key on the headset. If you hear a dial tone, the registration was successful.

For AT&T models without **↻**/HANDSET LOCATOR button on the telephone base:

1. Press **MENU** on the telephone base when idle.
2. Scroll to **Settings**, and then press **SELECT**.
3. Scroll to **Registration**, and then press **SELECT**. The base displays **Registering... Please wait**.
4. Follow Steps 2 and 3 under **For AT&T models with **↻**/HANDSET LOCATOR button on the telephone base** section.

For AT&T Synapse® business phone system:

1. Press **MENU**, **2**, and then **6** on the telephone base when idle. Menu **Cordless Headset** appears.
2. Press **Register**. The base displays **Registering in Progress...**
3. Follow Steps 2 and 3 under **For AT&T models with **↻**/HANDSET LOCATOR button on the telephone base** section.

For AT&T Syn248® business phone system:

1. Press **≡** MENU, **2**, and then **5** on the telephone base when idle. Menu **Cordless Headset Registration** appears.
2. Press **Register**. The base displays **Registering in Progress...**
3. Follow Steps 2 and 3 under **For AT&T models with **↻**/HANDSET LOCATOR button on the telephone base** section.

For AT&T SynJ® business phone system:

1. Press **MENU** on the telephone base when idle.
2. Scroll to **Registration**, and then press **ENTER** twice to select **Register HS**. The telephone base shows **Registering new device...** It takes up to 60 seconds to complete the registration.
3. Place the headset in the headset charger. The telephone base shows **Cordless headset registered** and beeps when the registration is successful.
4. Lift the headset, then press **ON/OFF** key on the headset. If you hear a dial tone and the extension **9** icon also appears on the telephone base, the registration was successful. If you have a dial tone but an extension number other than 0 displays on the telephone base, the headset is registered as a handset and will not function properly. If this is the case, you must deregister and start over. See **Replace a headset** section.

Replace a headset

If you want to replace a headset or reassign the designated headset number of a registered headset, you must deregister all handsets and headsets that are registered to the same telephone base. Then register each handset and headset individually.

To deregister all headsets:

To deregister all headsets from the telephone base, follow the instructions in the user's manual of your telephone system, or visit our website at www.vtechphones.com or AT&T's website at www.telephones.att.com. This operation will deregister all the DECT handsets, headsets, and cordless speakerphones, regardless of their battery status and whether they are within range or out-of-range.

If the deregistration process is successful, you hear "Not registered" when you press **ON/OFF** key on the headset. If the deregistration fails, you may need to reset the telephone or headset, and then try again.

NOTE

- You cannot deregister a headset if any system handset or headset is in use.

To reset:


- Unplug the power from the telephone base, then plug it back in.

Position the headset

There are four earbuds and four earhooks provided. One earbud and one earhook have been attached to the headset. You can choose a suitable size of earbud, earhook and an appropriate way to position your headset.

Replace the pre-installed earbud and earhook:

1. Hold both sides of the earbud. Twist and pull the earbud until it separates from the earpiece.

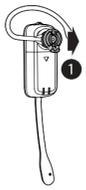


2. Rotate the earhook to vertical direction and then pull the earhook until it separates from the headset.



3. Attach an earhook, and then a suitable earbud to the headset until they fit into place.



To wear on the left ear:

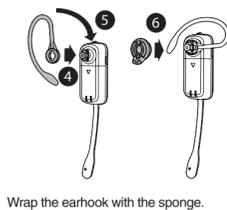

Adjust the headset to wear on the ear:

- Hook the headset on your ear. Adjust the angle of the headset until the microphone is pointing towards your mouth. Firmly grip the headset with one hand whenever adjusting the headset microphone up or down.



Over the head band

To attach the head band to the headset:

1. Refer to Steps 1 and 2 in **Replace the pre-installed earbud and earhook** section to remove the earbud and earhook.
2. Attach the headset to the headband.



3. Rotate the headset to horizontal direction until it clicks into place.



4. Adjust the head band to fit your head. Adjust and rotate the angle of the headset until the microphone is pointing towards your mouth.



To remove the head band from the headset:

1. Hold the headset with one hand and the head band with your other hand.



2. Rotate the headset to vertical direction and pull the headset until it separates from the head band.



Using the headset

Make a call

1. Follow the instructions in your telephone user's manual for making calls.
2. Press **ON/OFF** key to join the call.

Answer a call

- Press **ON/OFF** key to answer a call.

End a call

- Press **ON/OFF** key or place the headset in the headset charger.

Ringer

The headset does not have an external ringer. When there is an incoming call, the headset earpiece rings.

If you have telephones connected to the same telephone line, you can rely on the ringers of those telephones to alert you to incoming calls.

Volume

- During a call, press **VOL+** or **VOL-** on the headset to adjust the listening volume.

Mute

The mute function allows you to hear the other party but the other party cannot hear you.

1. During a call, press **MUTE**. The headset announced "Mute on".
2. Press **MUTE** again to resume the conversation. The headset announced "Mute off".

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

- Press **FLASH** to put the current call on hold and take the new call.
- Press **FLASH** to switch back and forth between calls.

Multiple headset/handset use

Headset(s) and handset(s) on the same phone line can join an outside call at the same time. The number of headset(s) and handset(s) that can join may be limited by your telephone system. See your telephone user's manual for more information.

To share an outside call:

- When a headset or handset is already on a call, press **ON/OFF** key on another headset to join the call.

- To exit the call, press **ON/OFF** key again or place the headset in the headset charger. The call continues until all handsets and/or headsets hang up.

General product care

Taking care of your headset

Your cordless headset contains sophisticated electronic parts, so it must be treated with care.

Avoid rough treatment

Place the headset down gently. Save the original packing materials to protect your headset if you ever need to ship it.

Avoid water

Your headset can be damaged if it gets wet. Do not use the headset outdoors in the rain, or handle it with wet hands. Do not install the headset charger near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms.

Cleaning your headset

Your headset has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

Operating range

This cordless headset operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this headset and telephone base can communicate over only a certain distance - which can vary with the locations of the telephone base and headset, the weather, and the layout of your home or office.

If there is a call while the headset is out of range, it may not ring, or if it does ring, the call may not connect well when you press **ON/OFF** key on the headset. Move closer to the telephone base, then press **ON/OFF** key on the headset to answer the call.

If the headset moves out of range during a telephone conversation, there may be interference.

To improve reception, move closer to the telephone base.

